

Removal Notes


To remove the VoIPVoice Integration and Drivers from your PC you can either:

Go through "Add / Remove" programs from your control panel or


From the main setup screen (setup.html) click **Install**




Click **Next**

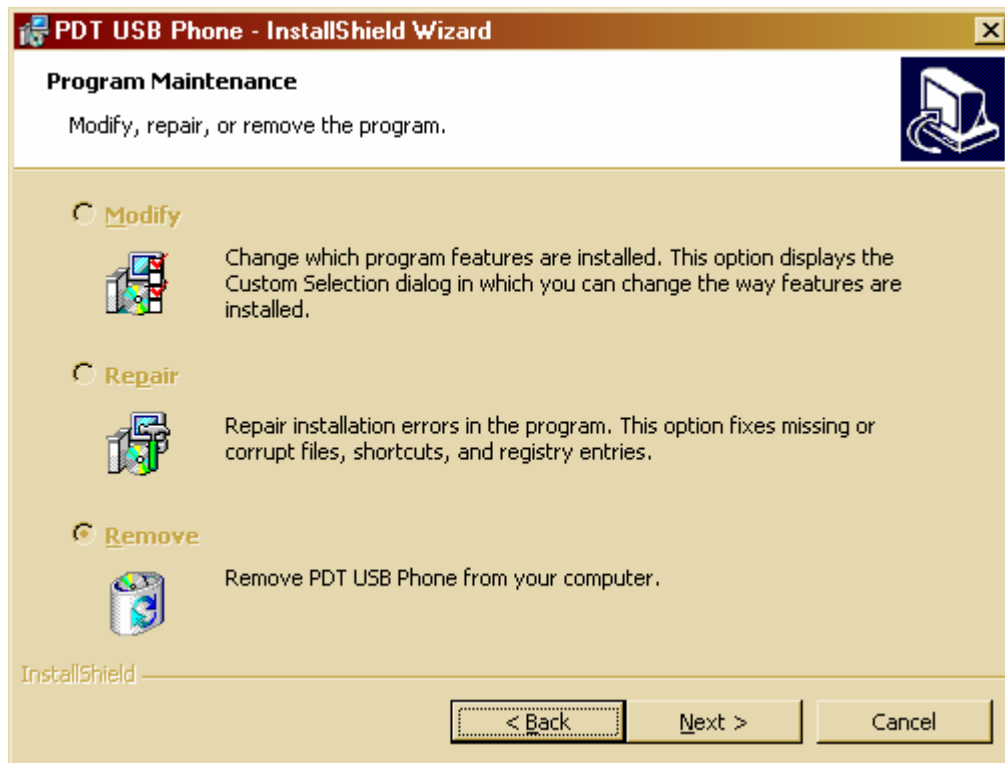

Select the Remove option, then click **Next**

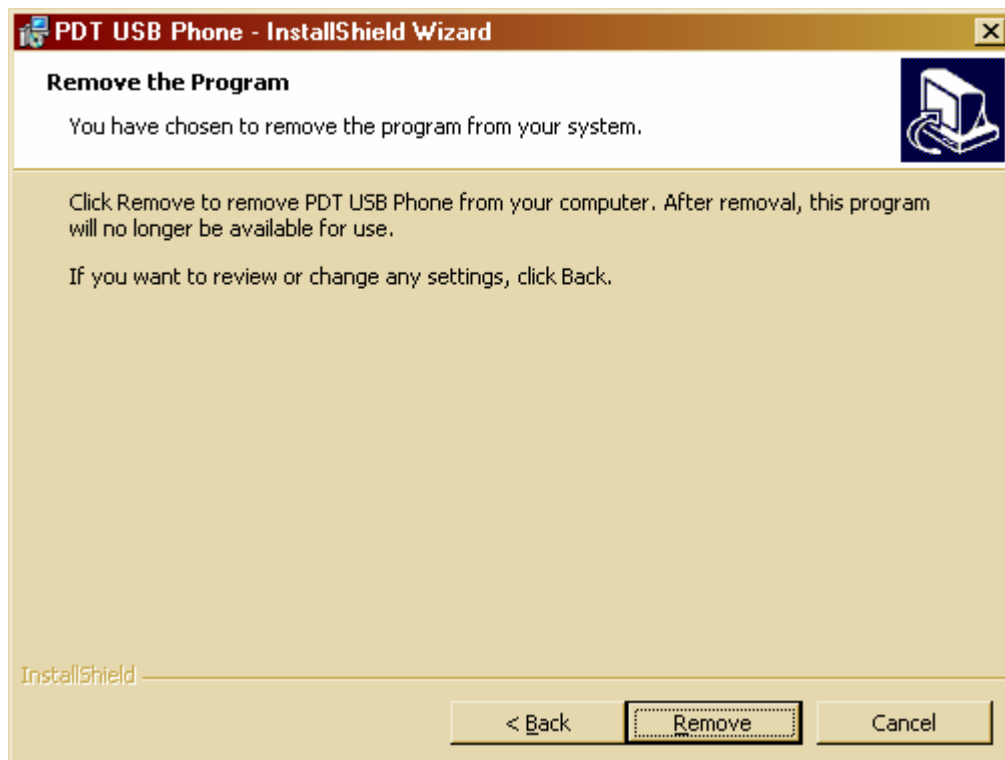

Click **Remove**

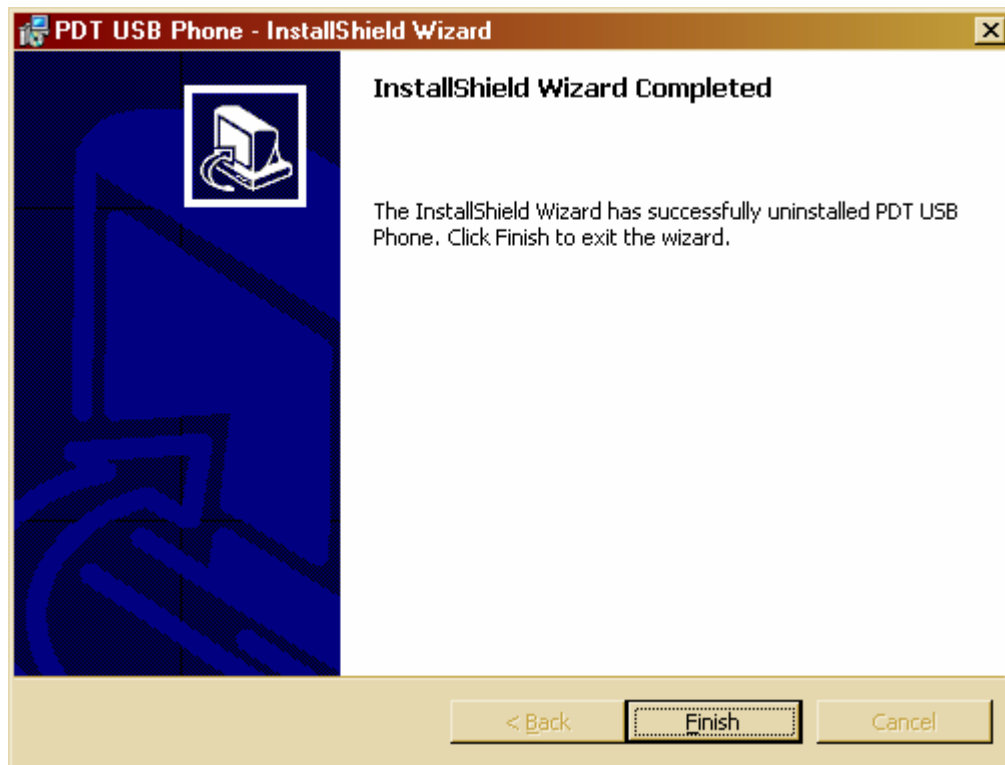

Click **Finish**

To Remove the Skype application go through "Add / Remove" programs from your control panel.